

4 Ways to get YOUR barcode into the XL:

"Arbitrary" barcodes (up to 16 characters) can be scanned into the Vorne XL by one of the following methods:

